

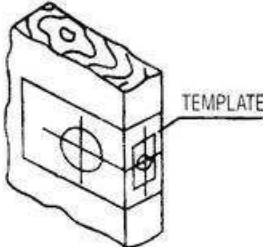
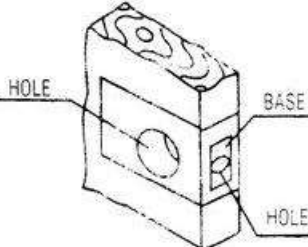
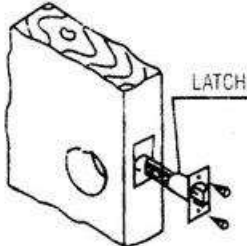
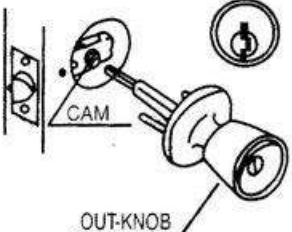
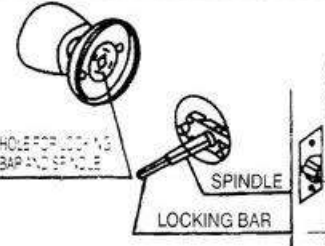
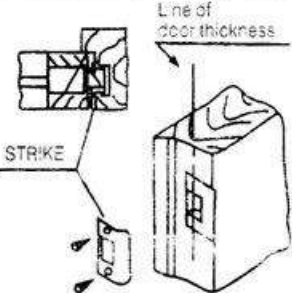

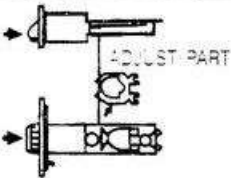


# CONSTRUCTOR

WWW.CONSTRUCTORLOCKS.COM

T: (718) 499-6200; E: dsdgroup41@gmail.com

## HOW TO INSTALL THIS TUBULAR LOCK

<b>1 MARK DOOR</b>  <p>Mark site of lock and Bore.</p>	<b>2 BORE HOLES</b>  <p>• Bore the holes through door • Cut out base.</p>	<b>3 INSTALL LATCH</b> 	<b>4 INSTALL OUT-KNOB</b>  <p>Key hole should be in down position</p>
<b>5 INSTALL IN-KNOB</b>  <p>HOLE FOR LOCKING BAR AND SPINDLE</p>	<b>6 INSTALL STRIKE</b>  <p>Line of door thickness</p>	<b>INSTRUCTION FOR ADJUSTABLE LATCH</b>  <p>The cam is pushed fully to the right for 70mm (2 3/4") backset. (During the adjustment keeping two teeth of the cam to forward always.)</p> <hr/>  <p>Push the latch inward, take off the adjust part for 70mm (2 3/4") backset.</p>	